

Self-assembly CleanFlowCell


Tools required for assembly:

- Open-end wrench: 13mm & 8mm
- Allen key: 6mm, 5mm, 4mm
- If necessary, hammer drill for doweling in the floor

Further information/recommendations:

- At least 2 people for assembly
- Gloves
- At least 2 ladders (pay attention to height)
- Sufficient space
- Forklift to unload the truck
- Observe the packing dimensions for inserting the pallet (see order)
- Socket (230V/16A) required for operation

To the assembly instructions:

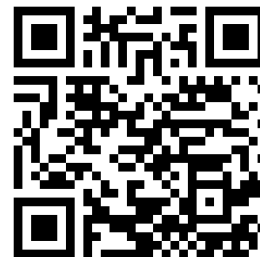

<https://schillingengineering.de/en/cleanroom-tent>